

## Transport Path | Panini Check Scanner Cleaning Card

Use cleaning card once a week to remove dust and dirt buildup from rollers and image lenses. Regular cleaning will extend the interval between manual cleaning as described in the Operator Manual for these components. Follow these steps:

 
1. Reconnect power to scanner
2. Remove ink cartridge if present.
3. Start imaging application and cycle cleaning card through the device 3-7 times, each time rotating the cleaning card top to bottom. Cancel application transaction and discard used card.



## Ink Jet Maintenance | Panini Ink Cleaning Wipe

Clean the ink jet cartridge (if applicable) during weekly cleaning procedure (procedure is the same for both the Single line and AGP cartridges).

1. Remove ink cartridge if present. DO NOT SHAKE CARTRIDGE.
2. With cartridge facing down, wipe nozzles with ink jet cleaning wipe.
3. Replace ink cartridge. Please see Operator Manual section 5 for further instruction.

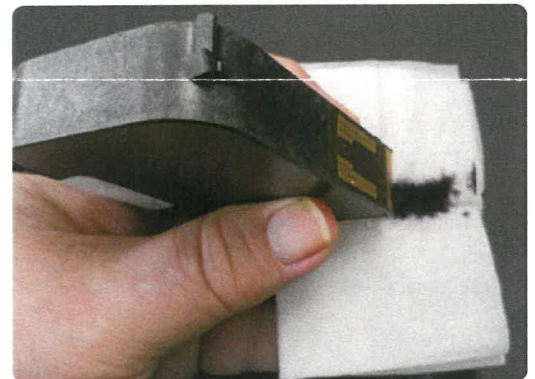


---

## Monthly Cleaning

### Lenses | Panini Cleaning Swab

Streaks may develop on the image caused by a buildup of ink deposits. If a streak develops on the image and using the cleaning card does not remove streak, follow these steps:

1. Remove inner and outer covers, gently open the front image lens, or open the right and left wing assemblies of the Vision neXt.
2. Use cleaning swab to wipe down both the front and back lenses.
3. Replace inner and outer covers or close the wings.

